








Veiledende priser

(gjeldende f.o.m. 1.1. 1970 inkl. moms)

TANDBERG

TANDBERG TV

Utstyr:

	Teak	Palisander	Teak	Palisander
 TANDBERG TV-84 m/UHF 2.255,— u/UHF 2.135,—		2.345,— 2.225,—	Bord: TV-84 111,—	137,—
 TANDBERG TV-85 m/UHF 2.345,— u/UHF 2.225,—		2.430,— 2.345,—	Bord med trinser: TV-85 125,—	153,—
 TANDBERG TV-86 m/UHF 2.370,— u/UHF 2.285,—		2.490,— 2.370,—	Bord med trinser: TV-86 125,—	153,—
 TANDBERG TV-87 m/UHF 2.610,— u/UHF 2.490,—		2.695,— 2.610,—	Bord med trinser: TV-87 125,—	153,—
 TANDBERG TV-88 m/UHF 2.815,— u/UHF 2.695,—		2.930,— 2.850,—	Bord: TV-88 111,—	137,—
 TANDBERG TV-89 m/UHF 3.075,— u/UHF 2.955,—		3.190,— 3.110,—	Bord: TV-89 111,—	137,—
 TANDBERG COLOR TV 6.225,—		6.225,—	Bord: Color TV .. 145,—	145,—
			1 sett trinser	26,50









TANDBERG BÅNDOPTAKERE

Udstyr:

	Teak	Palisander	Koffert
Modell 14			
TB 1421 (2 spor)	1.150,—	1.210,—	
TB 1441 (4 spor)	1.210,—	1.265,—	
TB 1422 (2 spor)			1.265,—
TB 1442 (4 spor)			1.290,—
Modell 15			
TB 1521 (2 spor)	1.265,—	1.290,—	
TB 1541 (4 spor)	1.325,—	1.355,—	
TB 1521-F (2 spor, F-utstyr)	1.675,—		
TB 1521-SL (2 spor)	1.510,—		
TB 1541-F (4 spor, F-utstyr)	1.765,—		
TB 1522 (2 spor)			1.345,—
TB 1522-SL (2 spor)			1.620,—
TB 1542 (4 spor)			1.435,—
Modell 1600X			
TB 1621X Stereo (2 spor) ..	1.565,—	1.565,—	
TB 1641X Stereo (4 spor) ..	1.565,—	1.565,—	
Modell 1200X			
TB 1221X Stereo (2 spor) ..	2.090,—	2.090,—	
TB 1241X Stereo (4 spor) ..	2.090,—	2.090,—	
Modell 6000X			
TB 6021X Stereo (2 spor) ..	2.475,—	2.475,—	
TB 6041X Stereo (4 spor) ..	2.475,—	2.475,—	
Modell 11			
TB 11-1 (1 spor)	2.420,—		
TB 11-2 (2 spor)	2.420,—		
TB 11-1P (1 spor) Pilot tone	3.460,—		

Koffert nr. 4 og nr. 5 ..	127,—
Bag	100,—
Plastdelsel	26,50
Mikrofon TM3	99,50
Mikrofon TM4 Handy	99,50
Mikr. TM4 Complete ..	153,—
Mikrofontråto	72,—
Pedal	132,—
Stetoset øretelefon ..	68,50
Hodetelefon K50	169,—
Hodetelef. m/mikr. F1 ..	153,—
Hodetelef. m/mikr. B1 ..	285,—
Bildesykronisator 3 ..	312,—
Lydbånd	
215—1800 ft.	45,25
175—1200 ft.	31,50
175—600 ft.	18,90
175—300 ft.	12,60
175—200 ft.	8,35
Lydbånd, Low Noise	
203—1800 ft.	49,50
203—1200 ft.	36,—
203—900 ft.	30,75
Skærbånd	4,20
Tomspole 7"	5,15
Tomspole 5"	3,55
Tomspole 3"	1,85
Veske TB 11	148,—
Batterifeliminator 4 for TB 11	195,—
Adaptor 2 for TB 11 ..	396,—

TANDBERG RADIO

SØLVSUPER		Teak	Palisander	Eik	
	Sølvsuper 10-70	1.060,—	1.080,—		
	Sølvsuper 10-71	1.235,—	1.295,—	1.235,—	
	Sølvsuper 10-72	1.385,—	1.445,—		
	Stereo decoder				158,—
					
Tuner-Amplifier					
	Hi-Fi FM	1.355,—	1.355,—		
	Stereo decoder				158,—
					
HULdra					
	Huldra 9 Stereo	2.170,—	2.170,—		
	Stereo decoder				158,—
					
TANDBERG HØYTTALERE					
	Hi-Fi System 10	207,—	233,—		
	Hi-Fi System 11	207,—			
	Hi-Fi System 12	293,—	347,—	293,—	
	Hi-Fi System 7	413,—	437,—		
	Hi-Fi System 13	413,—	437,—		
	Hi-Fi System 17	650,—	710,—		
	Hi-Fi System 15	770,—	830,—		
					
SEPARATHØYTTALERE					
	Separathøytaler 9	207,—			
	Kjøk.høyt. (sep.høyt. 16)	102,—			
TANDBERG PORTABLE RADIO					
					
	Tandberg Portable 41 Nøtte	840,—			
	Tandberg Portable 3-3 Skin-like	750,—			
UTSTYR PORTABLE RADIO					
	Veske	42,25			
	Batterieliminatør 3 for modell 3-3	90,—			
	Batterieliminatør 5 for modell 41	100,—			
	Monteringsramme for modell 3-3	42,25			
	Monteringsramme for modell 41	42,25			
	Monteringskassett for modell 41	90,—			
	Monteringskassett for 6 og 12V (TP3)	153,—			
	Monteringskassett, 12V Special (TP3)	90,—			
	Lås for monteringskassett (TP3)	15,80			
PLATESPILLERE					
	Platespiller SP25 m/keramisk pickup	398,—			
	Platespiller SP25 m/magnetisk pickup	493,—			
	Platespiller TD-150 AB m/magnetisk pickup	765,—			
	Platdeksel for SP25	26,50			
	Platdeksel for TD-150	74,—			
Handler:					